
# **USING THE AUDIO-VISUAL EQUIPMENT**

### PLEASE READ THROUGH THESE INSTRUCTIONS CAREFULLY BEFORE YOU BEGIN

To use the PC or for Internet access you will need a Birkbeck IT Services or Eduroam log in - ask the AV Team

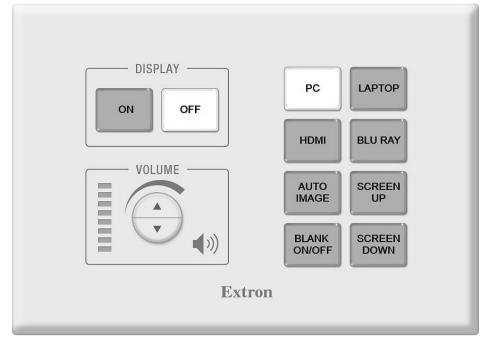 


#### **EXTRON CONTROL PANEL**

The panel in this room may not look exactly as shown here but all the essential functions will be available



unless you are using a Laptop with VGA

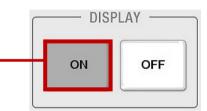

If the room is fitted with a data projector it will now activate and the ON button will continue to flash until the projector has finished warming up. Please be patient - this process can take longer than a minute to complete.

Alternatively, if the room is fitted with a professional display the screen will turn on almost immediately. The projector or display will now be ready to present whichever function you select from the input panel (below).

After connecting or logging on you can switch between sources as often as you wish during your presentation.

### **USING THE PC**

The PC is in the cabinet

Make sure it is ON before continuing

### PRESS THE PC BUTTON

Log on using your user name and password

# **USING HDMI**

Connect the provided HDMI cable into the device and ensure the device is powered on.


PRESS THE HDMI BUTTON.

## **AUTO IMAGE**

Press this button if the image is cut-off or not displaying correctly.

# **BLANK ON/OFF**

Press this button to mute the image on the projection screen.

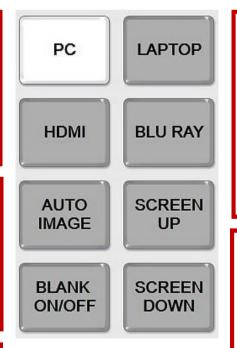

### **USING LAPTOP**

NOTE: DO NOT PRESS THE "ON" BUTTON YET.

Connect the provided VGA cable to the laptop and then ensure that it is powered on.

NOW PRESS THE "ON" BUTTON

Wait for the "ON" button to stop flashing.

PRESS THE LAPTOP BUTTON

#### **USING THE BLU-RAY**

Make sure the BLU-RAY Player is ON

# **INSERT THE BLU-RAY OR DVD**

Use the Volume Control on the Extron control panel to set the required sound

# **SCREEN UP / SCREEN DOWN**

Manually raises or lowers the projection screen, for accessing the whiteboard.

## AT THE END OF YOUR SESSION

PRESS THE OFF BUTTON

3456 opt.2 FOR AV SUPPORT

NEED MORE HELP?

6031
FOR RECEPTION